



SteraLight

Multifunctional UV-C Sterilizer

Instructions



Touchless UV-C Sterilization

SteraLight Product Features

1. **UV-C Sterilization 253.7nm λ** – Optimal wavelength for maximum germicidal effect. Sterilization of most bacteria, viruses, yeasts, and molds after approximately five minutes of exposure.
2. **Essential Oil Diffusion** – Diffuses essential oils from natural plant extracts to infuse a fragrance of your choice into your masks or cloth objects. Diffusion is optional and not recommended for electronics.
3. **9 Watt USB Charger** – Charge your phone or other electronic gear using the USB port on the front of the SteraLight device.
4. **Large Sterilization Bay** – Suitable for masks, mobile phones, smaller tablets, keys, wallets, money, jewelry, watches, tv remotes, earbuds, small electronics, makeup accessories, and/or children toys.

How To Use Your SteraLight

Sterilization:


1. Put the mask (or object to be sterilized) into the sterilization bay.
2. Press “UV” button
 - This steps turns on the UV light. ONLY TURN ON LIGHT WHILE LID IS CLOSED. DO NOT LOOK DIRECTLY INTO UV LIGHT.
3. The progress bar will indicate how much time is remaining. Leave the lid closed with UV light powered on for the full cycle for optimal germicidal effect.
4. After about 5 minutes, the SteraLight assistant will notify you that sterilization is complete. Open the SteraLight lid and enjoy using your sterilized objects worry-free.

Aromatherapy (optional):

1. Place 3 to 5 drops of essential oil into the diffuser chamber (small holes in the back of the sterilization bay).
2. Put the mask (or object to be diffused with essential oil) into the sterilization bay.
3. Close the lid. Press the “Diffuse” button and diffusing will begin.
4. The SteraLight assistant will notify you when infusion is complete (approximately 5-10 minutes).

Specifications & Diagram

Outer size	8.9in x 4.8in x 2.0in (226mm x 123mm x 50mm)
Inner size	6.9in x 4.1in x 1.2in (175mm x 104mm x 30mm)
Input Voltage	5V
Input Current	2A
Power (Aromatherapy)	1W
Power (Sterilize)	2W
Output Power (charger)	9W

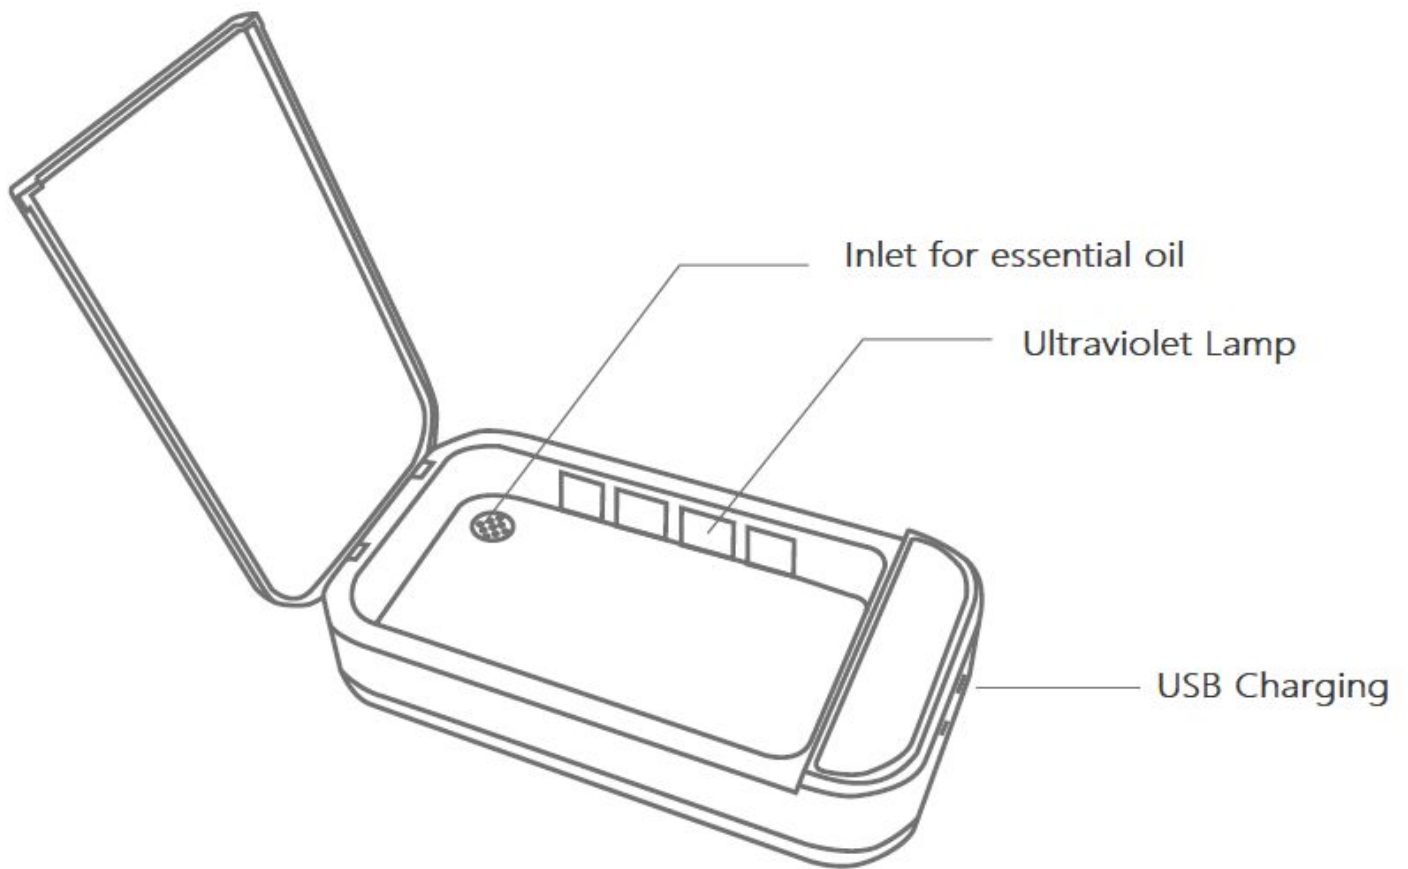

UV Safety

1. Aromatherapy/diffusion does not sterilize objects, and cannot be substituted for sterilization.
2. Sterilize and diffuse can not be used simultaneously.
3. We recommend you sterilize first, then diffuse.
4. Do not submerge SteraLight in water or place the device under running water.
5. Do not use corrosive chemicals to clean your SteraLight. Remember, the sterilization chamber is being sanitized every time you run the device!
6. Do not clean the unit with organic solvent.
7. Do not stare directly into UV lights.
8. Only push the "UV" button **after** the lid is closed.
9. To clean the SteraLight, spray disinfectant onto towel and gently wipe the surfaces of the device.
10. Keep the SteraLight out of reach from children. Never let children play with the SteraLight.